

# Hardware : 5300 and 6300 : Enabling the Auto-Trigger Mode

Follett Technical Support Knowledgebase Article

## Applies to:

Follett 5300 and 6300 Scanners

## Symptoms:

You may want to enable the Auto-Trigger mode for your scanner.

## Solution:

1. Start by scanning the 'Start of Configuration' barcode.
2. Scan 'Trigger Mode' to return the scanner to standard operation, or scan 'Auto Scan Mode' for hands free operation.
3. Scan the 'End of Configuration' barcode. The unit is now in the desired mode of operation.



Start Of Configuration

End Of Configuration



### General Scan Mode Setting

#### Handheld Operation

Barcode Value	Barcode Label	Description
SM01		<b>Trigger Mode</b> <ul style="list-style-type: none"><li>• The scanner becomes inactive as soon as the data is transmitted. It must be triggered to become active again.</li></ul>
SM02		<b>Auto Scan Mode</b> <ul style="list-style-type: none"><li>• The scanner is still active after the data is transmitted but the successive transmission of the same barcode is not allowed when the trigger switch is pressed again.</li></ul>